
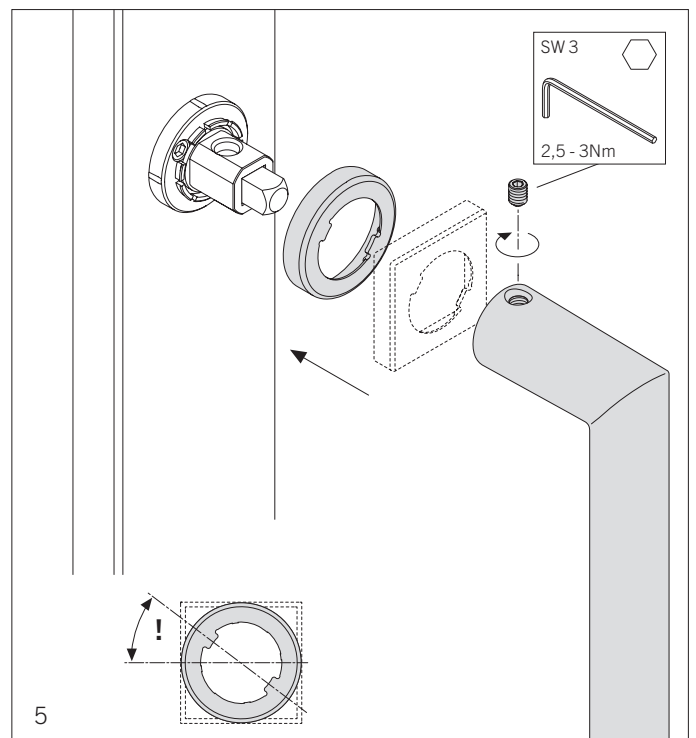
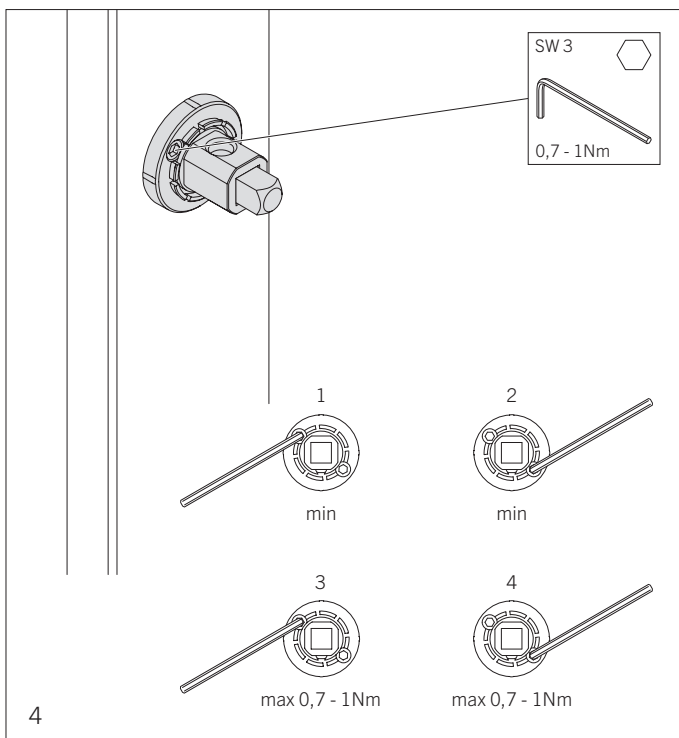
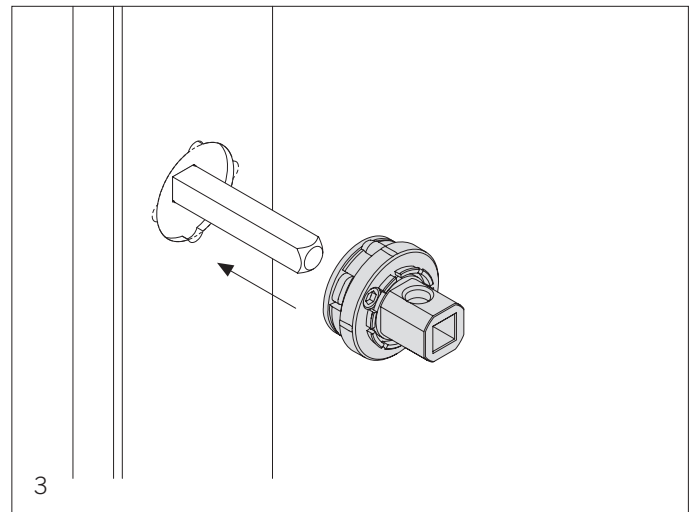
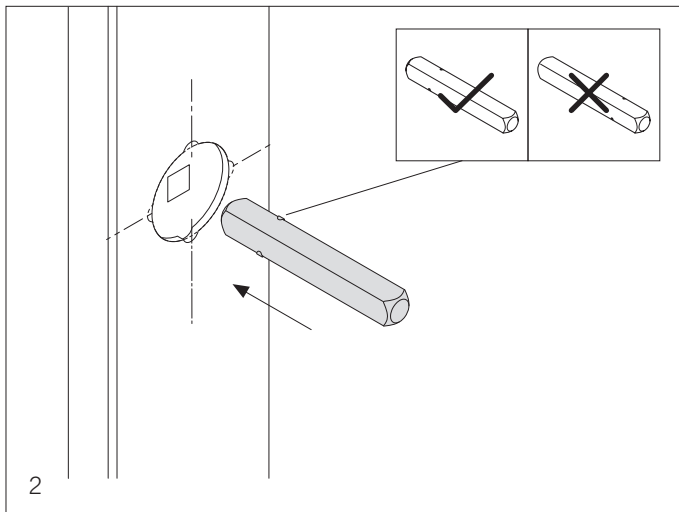


1076 71100, 71101, 72100, 72101

Montage für Metallfenster, Assembly for metal windows,






Montage pour fenêtres métalliques, Montage voor metalen kozijnen,

Montaje para ventanas de metal

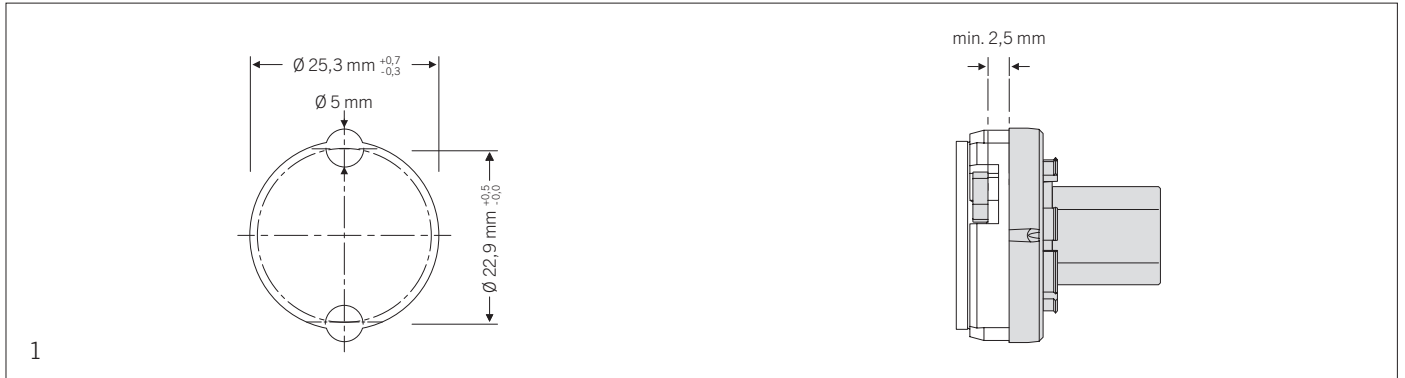






1076 71423, 71424, 72423, 72424

Montage für Metallfenster, Assembly for metal windows,
 Montage pour fenêtres métalliques, Montage voor metalen kozijnen,
 Montaje para ventanas de metal

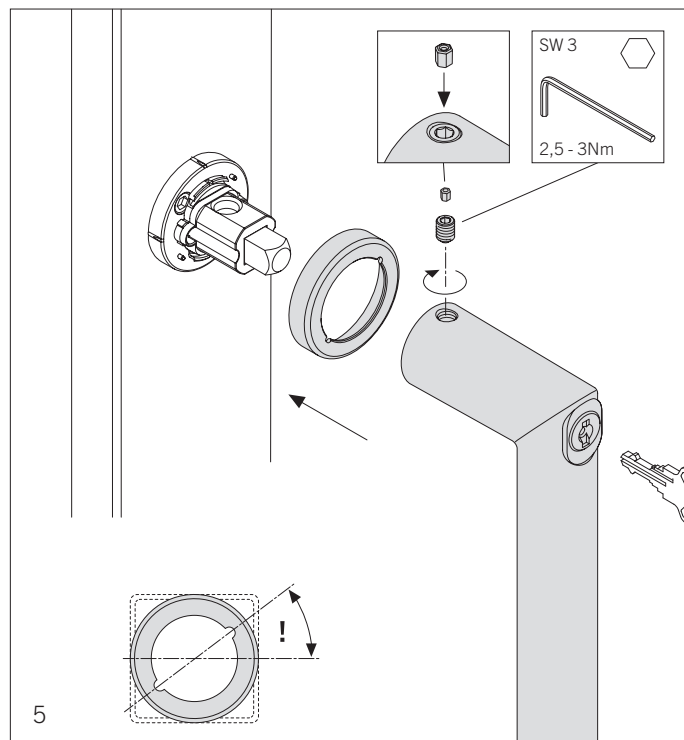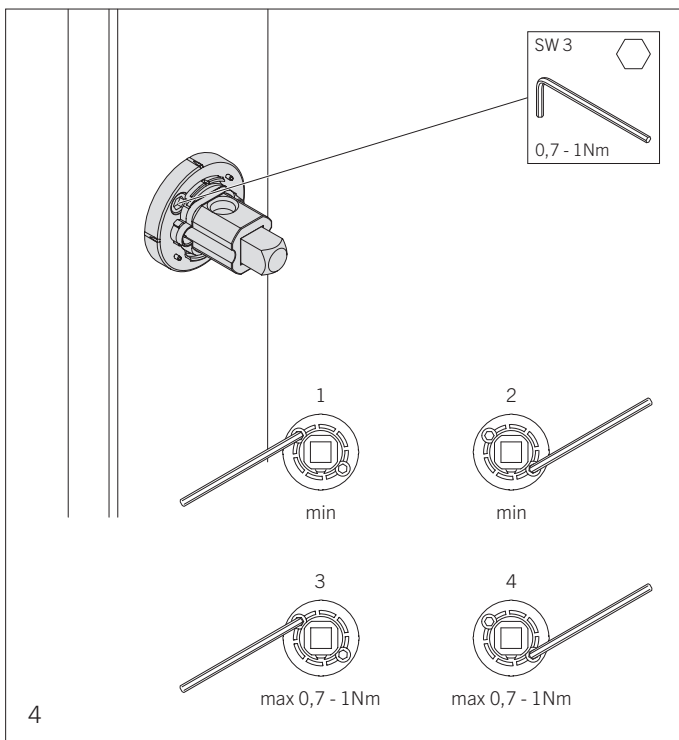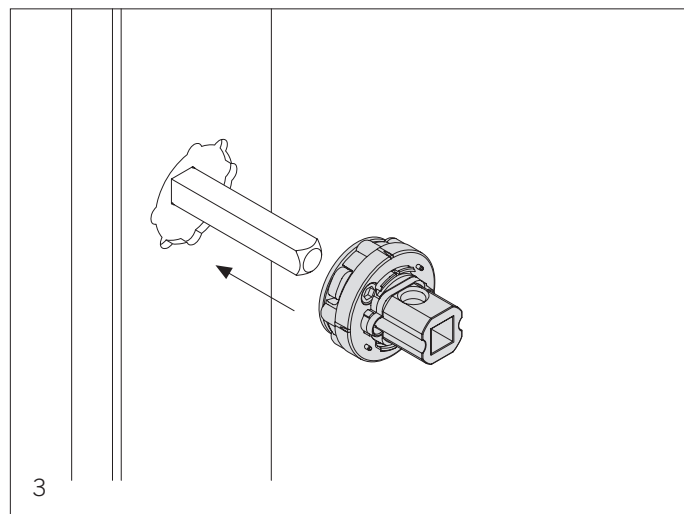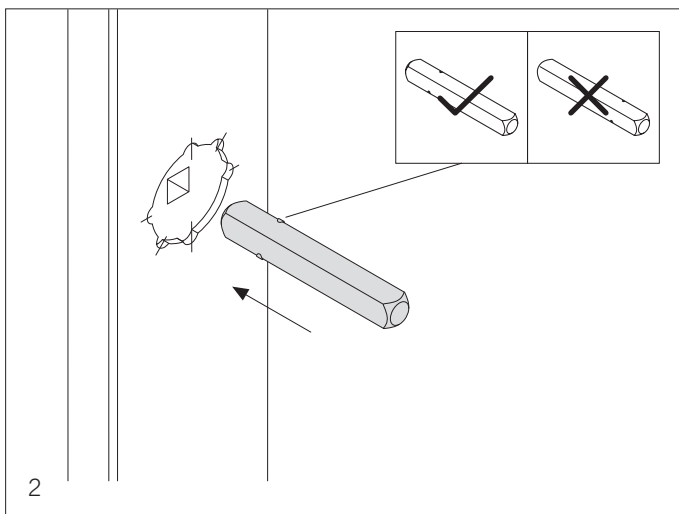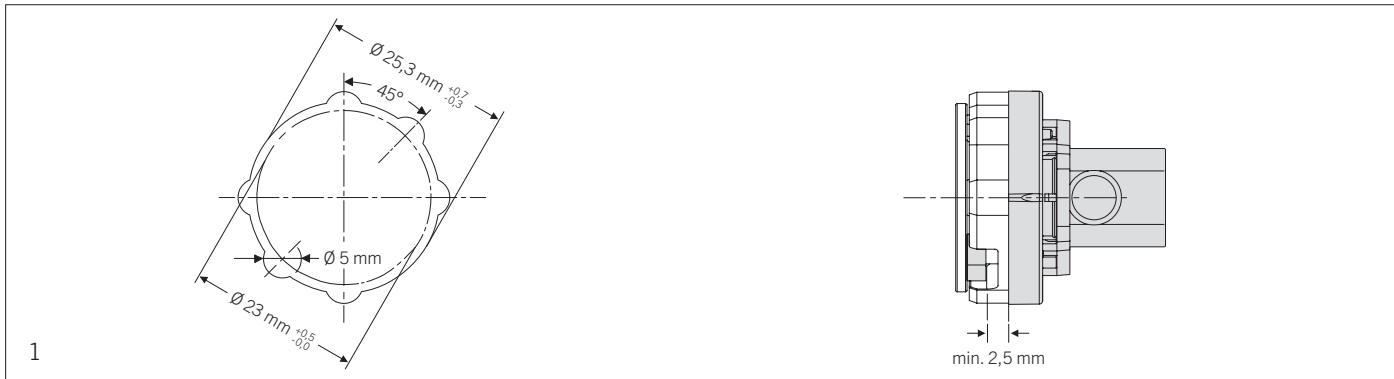

34 71101, 71102, 72101, 72102

Montage für Holzfenster, Assembly for timber windows,
 Montage pour fenêtres en bois, Montage voor houten kozijnen,
 Montaje para ventanas de madera

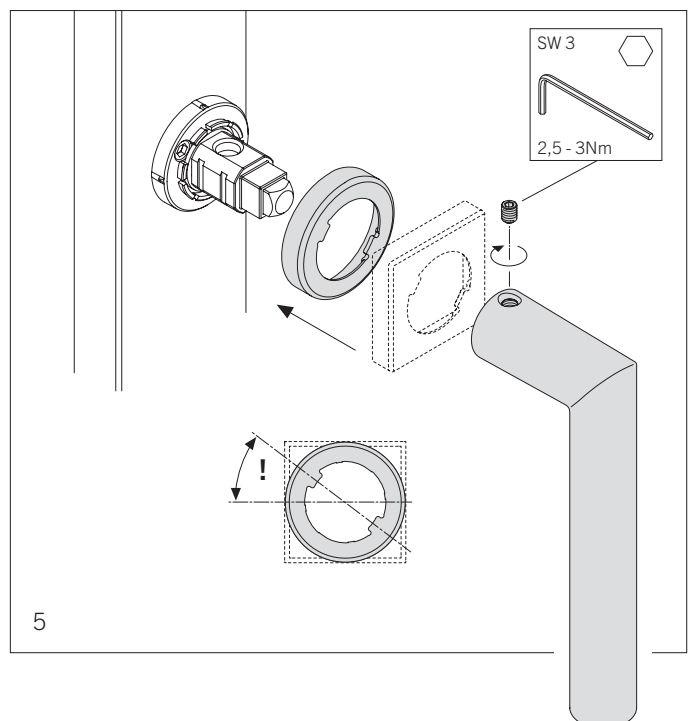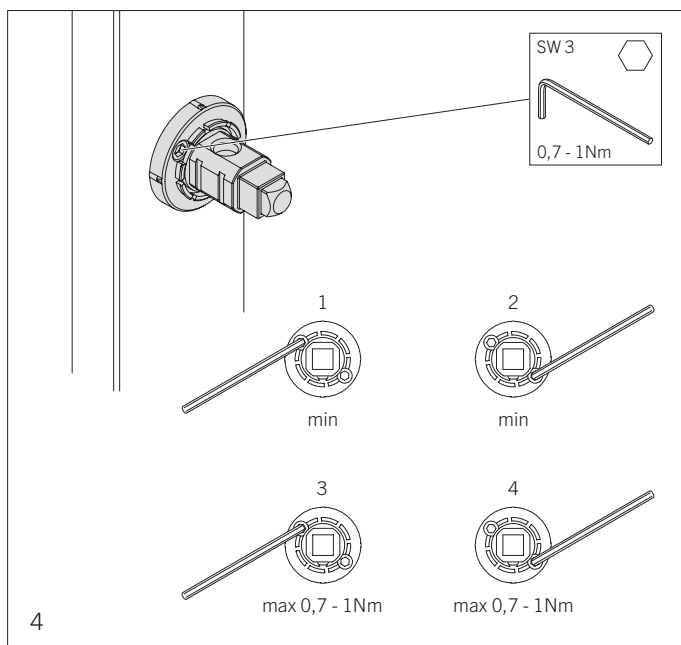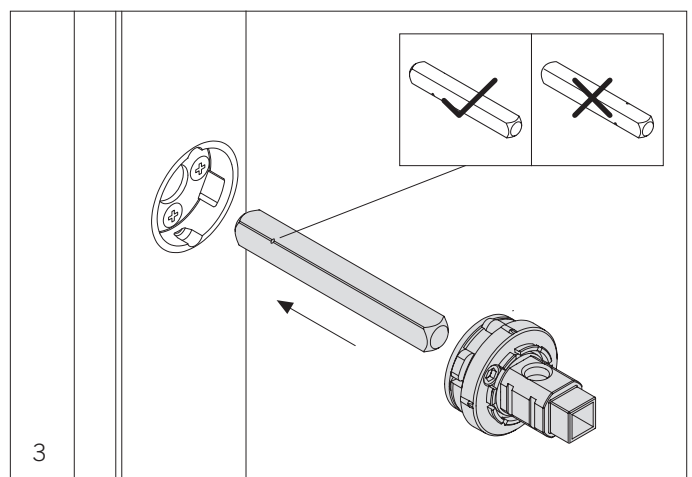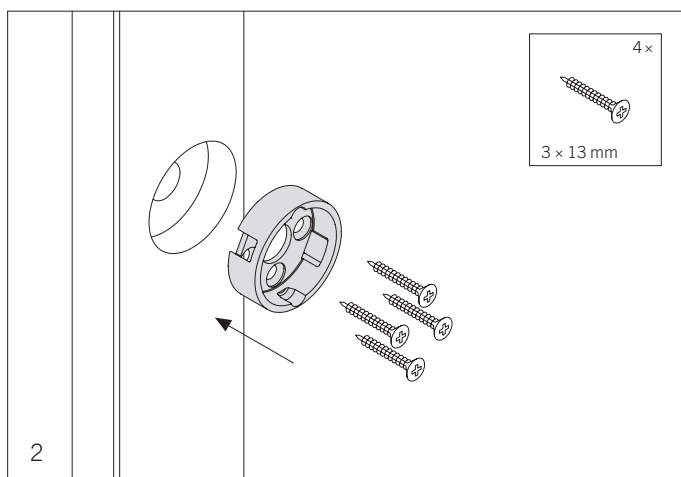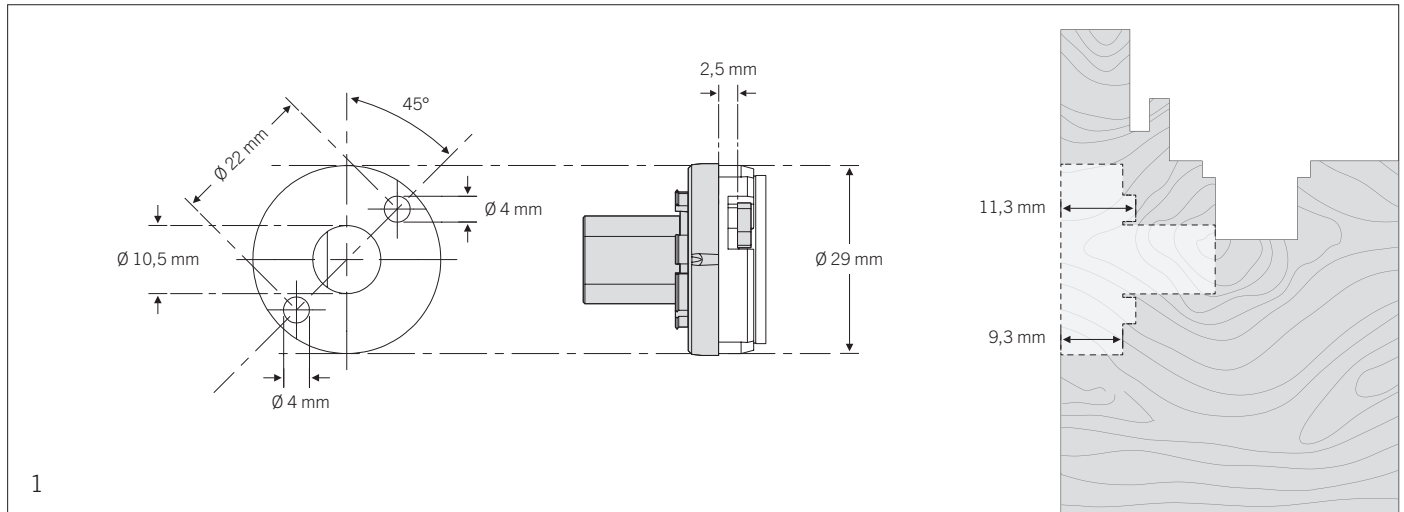

34 71423, 71424, 72423, 72424

Montage für Holzfenster, Assembly for timber windows,
 Montage pour fenêtres en bois, Montage voor houten kozijnen,
 Montaje para ventanas de madera

